

## Index

### A

Arrow keys, using, 1-15  
ASCII, character table, C-1ff  
Aspect Ratio, in Options form, 3-20  
Assign Password command, 3-7

### B

Backing up system diskette, 1-4  
Backup  
    defined, 1-18  
    how to, 1-18ff  
    purpose, 1-18  
    with wildcard, 3-15  
Baud Rate, in Sign-On form, 3-5  
Begin a New Application command,  
    2-6  
Bottom Margin, in Print Options  
    form, 3-32  
Built-in typeface, 3-18

### C

Cancel a Key Definition command,  
    2-11  
Cancel command, 3-35  
Cancel Start-Up File command, 3-10  
Canceling start-up windows, 2-6  
Change File Protection command,  
    3-11  
Change Volume Name command, 3-12  
Characteristics, displaying file,  
    3-26  
Code-Ctrl-?, 2-5  
Code-Shift-?, 2-9

### Commands, common

    data transfer, 1-17  
    editing, 1-16  
    exiting, 1-17  
    help, 1-17  
    options, 1-17  
    selection, 1-17  
    table of, 1-16  
Common commands, in GRiD software,  
    1-15ff  
Communications, 1-21, 1-22  
Configuration, displaying, 4-13  
Configuring system, 1-13, 1-14  
Confirm, vii  
Connection Type, in Sign-On form,  
    3-2  
Copying diskettes, 4-2ff  
Copying files, 3-12ff  
Current Modem, in Options form,  
    3-21  
Current Plotter, in Options form,  
    3-19  
Current Printer, in Options form,  
    3-19  
Current Serial, in Options form,  
    3-22  
Current Typeface, in Options form,  
    3-18  
Current window, 2-2, 2-7

### D

Damaged diskette, repairing, 4-7ff  
Data transfer commands, 1-17  
Define a Key as a File command,  
    2-10  
Define a Key as Keystrokes  
    command, 2-10, 2-11

Define User Keys menu, 2-9  
Device  
  defined, 1-7  
  start-up, 1-2  
  Temporary Disk, 4-15  
  updating choices, 3-9  
  volume name, 1-7, 1-8  
Dial Type, in Sign-On form, 3-4  
Directory (see Subject)  
Disable ROM Files, 4-1  
Disconnect After, in Sign-On form,  
  3-6  
Diskette  
  changing volume name, 3-12, 4-2,  
  4-5  
  copying, 4-2ff  
  initializing, 1-13, 4-5ff  
  repairing, 4-7ff  
Display List of Windows command,  
  2-15  
Display Subjects command, 3-29  
Display Titles command, 3-27  
Duplicate Files command,  
  GRIDManager, 3-12  
Duplicate Media  
  commands menu, 4-3  
  defined, 4-2  
  with hard disk, 4-4  
  
E  
Edit Sign-On form command, 3-7  
Editing commands, 1-16  
Erase Subjects or Files command,  
  GRIDManager, 3-16  
Error Message Source, in Options  
  form, 3-23  
Error messages, 5-1ff  
Errors  
  message source, 3-23  
  stopping for, 3-20  
Exchange for Another File command,  
  GRIDManager, 3-24  
Exit commands, in GRiD software,  
  1-17  
Exiting, GRIDManager, 3-23, 3-35  
  
F  
File characteristics, displaying  
  with GRIDManager, 3-26

File form  
  File Form Overview command, 1-6  
  help menu, 1-6  
  how to fill in, 1-5ff  
  moving in, 1-5, 1-6  
  purpose, 1-5  
  Usage command, 1-6  
  Window Overview command, 1-6  
File protection, changing, 3-11  
File server device  
  signing off, 3-6  
  signing on, 3-2  
Filename (see Title)  
Fonts, examples, E-1, E-2  
Form Feed, in Print Options, 3-33  
Formatting media, 1-13, 4-5ff  
Forms, in GRiD software, 1-14

G

GRiD Server, 1-21  
GRiD software, common concepts,  
  1-14ff  
GRIDManager  
  activating, 3-1  
  commands menu, 3-2  
  defined, 3-1  
  older version, 2-17  
  purpose, 3-1

H

Hard disk, initializing, 4-5ff  
Heading Text, in Print Options  
  form, 3-32  
Headings, in Print Options form,  
  3-32  
Help commands, in GRiD software,  
  1-17  
Help menu, File form, 1-6

I

Initialize Media  
  commands menu, 4-6  
  defined, 4-5  
Initializing media, 1-13, 4-5ff

## K

## Keystrokes

- canceling recorded, 2-11
- recording, 2-10, 2-11

## Kind

- defined, 1-10
- examples, 1-11, 1-12
- purpose, 1-10
- updating choices, 1-10, 3-9

## L

- Label, diskette, 1-7, 1-8
- Left Margin, in Print Options, 3-33
- Length of file, determining, 3-26, 3-27
- Limited Memory alert, 2-16, 2-17

## M

- Macro, defining, 2-9ff
- Media utilities
  - Duplicate Media, 4-2ff
  - Initialize Media, 4-5ff
  - MediaRepair, 4-7ff
- MediaRepair
  - defined, 4-7
  - examining repaired files, 4-12
  - messages, 4-9ff
- Memory usage report, 3-34
- Menus, in GRiD software, 1-14
- Messages, source, 3-23
- Modem, specifying driver, 3-21, 3-22
- Modem Type, in Sign-On form, 3-4
- Monitor, changing aspect ratio, 3-20, 3-21
- Move Files command, GRiDManager, 3-17
- Move This Window Off Screen command, 2-12
- Multi-tasking, 2-1
- Multiple windows
  - displaying, 2-8, 2-9, 2-14, 2-15
  - displaying list of, 2-15
  - examples of, 2-3, 2-4

## N

- New Version Only, in Duplicate command, 3-14

- Next Action, in Exchange for Another File, 3-25

## O

- Options command, GRiDManager, 3-18
- Options commands, in GRiD software, 1-17
- Options form, updating choices, 3-9

## P

## Password

- assigning, 3-7, 3-8
- defined, 1-12
- Pathname syntax, B-1
- Phone Number, in Sign-On form, 3-3
- Plotter, activating, 3-19, 3-20
- Print Char Size, in Print Options, 3-33
- Print Options
  - bottom margin, 3-32
  - form feed, 3-33
  - heading text, 3-32
  - headings, 3-32
  - left margin, 3-33
  - print size, 3-33
  - right margin, 3-33
  - top margin, 3-32
- Print Subjects command, 3-31
- Print Subjects to a File command, 3-31
- Print Titles command, 3-30
- Print Titles to a File command, 3-31
- Printer
  - activating, 3-19
  - set-up, 1-14
- Printing
  - screen, 4-14
  - selecting typeface, 3-33
  - setting options in GRiDManager, 3-31
  - subjects, 3-31
  - titles, 3-30, 3-31
- Problems, troubleshooting, D-1, D-2
- Programs subject, files in, A-1ff
- Protection, for files, 3-11

## Q

- Quit command, 3-23

- R
- RAM disk utility, 4-15
  - Recording keystrokes, 2-10, 2-11
  - Recovering data, how to, 1-20
  - Renaming a subject, 3-17
  - Repairing damaged disks, 4-7ff
  - Required start-up files, 1-2, 1-3
  - Right Margin, in Print Options, 3-33
  - ROM files, disabling, 4-1, 4-2
- S
- Save Changes, in Exchange for Another File, 3-25
  - Save This Sign-On Form to a File command, 3-24
  - Save Window Configuration command, 2-5
  - ScanCase
    - defined, 4-13
    - using, 4-13
  - Screen
    - changing aspect ratio, 3-20, 3-21
    - printing, 4-14
  - Screen Frame, in Options form, 3-20
  - ScreenWatch utility, 4-14
  - Select Start-Up File command, 3-9
  - Selection commands, in GRID software, 1-17
  - Serial port, specifying driver, 3-22, 3-23
  - Set Printing Options command, 3-31
  - Set Time command, 3-7
  - Show Characteristics of a File command, GRIDManager, 3-26
  - Sign-Off command, 3-6
  - Sign-On command, 3-2
  - Sign-On form
    - editing, 3-7
    - filling in, 3-2ff
    - saving, 3-24
    - writing to a file, 3-26
  - Size, of printed characters, 3-33
  - Speaker Volume, in Sign-On form, 3-6
  - Split Window Horizontally command, 2-7
  - Split Window Vertically command, 2-12
- Start-up
- device, 1-2
  - files used during, A-1
  - procedure, 1-1
  - required files, 1-2, 1-3
  - User file, 1-13, 1-14
  - warm, 1-4
- Start-up file
- canceling, 3-10
  - canceling during start-up, 3-10
  - selecting, 3-9, 3-10
- Starting a window, 2-6
- Stop for Errors, in Options form, 3-20
- Subject
- defined, 1-8
  - displaying, 3-29, 3-30
  - printing list, 3-31
  - printing to a file, 3-31
  - renaming, 3-17
- Switch to Next Window command, 2-12
- System configuration
- about, 1-13, 1-14
  - displaying, 4-13
  - Options command, 3-18
- System-Wide Typeface, in Options form, 3-19
- T
- Temporary Disk
- defined, 4-15
  - using, 4-15
- Terminal emulators, 1-21, 1-22
- Time, setting, 3-7
- Title
- defined, 1-9
  - displaying list, 3-27, 3-28
  - printing list, 3-30
  - printing to a file, 3-31
- Top Margin, in Print Options form, 3-32
- Transfer (Print or Display) command, 3-27
- Transfer command, 3-23
- Troubleshooting, D-1, D-2
- Typeface
- built-in, 3-18
  - examples, E-1, E-2
  - setting current, 3-18
  - setting system-wide, 3-19
- Typing ahead, 1-14

## U

Update Options Choices command, 3-9  
 Update Storage Device Choices:  
   command, 3-9  
 Usage command, 3-34  
 User file, 1-3, 1-13, 1-14, 2-4,  
   2-5  
 User key  
   canceling, 2-11  
   defining as a file, 2-10  
   defining as keystrokes, 2-10,  
   2-11

## V

Verification, in Duplicate  
   command, 3-13ff  
 Verify Duplicate form, 3-13ff  
 Virtual disk utility, 4-15  
 Voice Before Data, in Sign-On  
   form, 3-5  
 Volume name  
   adding to device list, 1-8  
   changing, 3-12, 4-2, 4-5  
   defined, 1-7  
   updating list of, 1-8

## W

Wait for Answer, in Sign-On form,  
   3-5  
 Warm start-up, 1-4

Which Files, in Duplicate command,  
   3-14

Wildcard character, 3-35, 3-36

## Window

blank, 2-8, 2-14  
 current, 2-2, 2-7  
 defined, 2-2  
 displaying list, 2-15  
 displaying multiple, 2-8, 2-9,  
   2-14, 2-15  
 moving off screen, 2-12  
 removing, 2-4  
 saving configuration, 2-5, 2-  
 splitting horizontally, 2-7  
 splitting vertically, 2-12  
 starting a new one, 2-6  
 switching, 2-3, 2-4, 2-12  
 zooming up or down, 2-16

## Window Manager

commands menu, 2-5  
 defined, 2-1  
 delays, 2-16  
 examples of use, 2-1, 2-2  
 limited memory alert, 2-16, 2-17  
 purpose, 2-1  
 with older GRID Manager, 2-17

## Window Overview Command, 2-5

Write Sign-On Form to a File  
   command, 3-26

## Z

Zoom Window Up or Down command,  
   2-16