

Table D-1. GRiD Compass MS-DOS Keyboard Codes

Key	Unshifted	SHIFT	CODE	CODE-SHIFT	CTRL	SHIFT-CTRL	CODE-CTRL	CODE-SHIFT-CTRL
'	27 (')	22 (")	60 (`)	5C (\)	07 (BEL)	02 (STX)	00 03	1C (FS)
,	2C (,)	3C (<)	5B ([)	7B ({)	0C (FF)	1C (FS)	1B (ESC)	1B (ESC)
-	2D (-)	5F ( _)	00 53	7F DEL	0D (CR)	1F (US)	8D	1F (US)
.	2E (.)	3E (>)	5D (])	7D (})	0E (SO)	1E (RS)	1D (GS)	1D (GS)
/	2F (/)	3F (?)	BF (code ?)	BF (code ?)	0F (SI)	1F (US)	9F	9F
0	30 (0)	29 ())	00 44	00 5D	10 (DLE)	09 (HT)	90	89
1	31 (1)	21 (!)	00 3B	00 54	11 (DC1)	01 (SOH)	91	81
2	32 (2)	40 (@)	00 3C	00 55	12 (DC2)	00 03	92	80
3	33 (3)	23 (#)	00 3D	00 56	13 (DC3)	03 (ETX)	93	83
4	34 (4)	24 (\$)	00 3E	00 57	14 (DC4)	04 (EOT)	94	84
5	35 (5)	25 (%)	00 3F	00 58	15 (NAK)	05 (ENQ)	95	85
6	36 (6)	5E (^)	00 40	00 59	16 (SYN)	1E (RS)	96	9E
7	37 (7)	26 (&)	00 41	00 5A	17 (ETB)	06 (ACK)	97	86
8	38 (8)	2A (*)	00 42	00 5B	18 (CAN)	0A (LF)	98	8A
9	39 (9)	28 (()	00 43	00 5C	19 (EM)	08 (BS)	99	88
;	3B (;)	3A (:)	7E (~)	7C ( )	1B (ESC)	1A (SUB)	1E (RS)	1C (FS)
=	3D (=)	2B (+)	00 52	AB (code +)	1D (GS)	0B (VT)	9D	8B
A	61 (a)	41 (A)	00 1E	00 1E	01 (SOH)	01 (SOH)	81	81
B	62 (b)	42 (B)	00 30	00 30	02 (STX)	02 (STX)	82	82
C	63 (c)	43 (C)	00 2E	00 2E	03 (ETX)	03 (ETX)	83	83
D	64 (d)	44 (D)	00 20	00 20	04 (EOT)	04 (EOT)	84	84
E	65 (e)	45 (E)	00 12	00 12	05 (ENQ)	05 (ENQ)	85	85
F	66 (f)	46 (F)	00 21	00 21	06 (ACK)	06 (ACK)	86	86
G	67 (g)	47 (G)	00 22	00 22	07 (BEL)	07 (BEL)	87	87
H	68 (h)	48 (H)	00 23	00 23	08 (BS)	08 (BS)	88	88
I	69 (i)	49 (I)	00 17	00 17	09 (HT)	09 (HT)	89	89
J	6A (j)	4A (J)	00 24	00 24	0A (LF)	0A (LF)	8A	8A
K	6B (k)	4B (K)	00 25	00 25	0B (VT)	0B (VT)	8B	8B
L	6C (l)	4C (L)	00 26	00 26	0C (FF)	0C (FF)	8C	8C
M	6D (m)	4D (M)	00 32	00 32	0D (CR)	0D (CR)	8D	8D
N	6E (n)	4E (N)	00 31	00 31	0E (SO)	0E (SO)	8E	8E
O	6F (o)	4F (O)	00 18	00 18	0F (SI)	0F (SI)	8F	8F
P	70 (p)	50 (P)	00 19	00 19	10 (DLE)	10 (DLE)	90	90
Q	71 (q)	51 (Q)	00 10	00 10	11 (DC1)	11 (DC1)	91	91
R	72 (r)	52 (R)	00 13	00 13	12 (DC2)	12 (DC2)	92	92
S	73 (s)	53 (S)	00 1F	00 1F	13 (DC3)	13 (DC3)	93	93
T	74 (t)	54 (T)	00 14	00 14	14 (DC4)	14 (DC4)	94	94
U	75 (u)	55 (U)	00 16	00 16	15 (NAK)	15 (NAK)	95	95
V	76 (v)	56 (V)	00 2F	00 2F	16 (SYN)	16 (SYN)	96	96
W	77 (w)	57 (W)	00 11	00 11	17 (ETB)	17 (ETB)	97	97
X	78 (x)	58 (X)	00 2D	00 20	18 (CAN)	18 (CAN)	98	98
Y	79 (y)	59 (Y)	00 15	00 15	19 (EM)	19 (EM)	99	99
Z	7A (z)	5A (Z)	00 2C	00 2C	1A (SUB)	1A (SUB)	9A	9A
BACKSPACE	08	C8	88	8A	08 (BS)	88	88	8A
RETURN	0D	CD	8D	8C	0D (CR)	8D	8D	8C
DownArrow	00 50	ESC [ B	00 51	00 4F	84	8E	00 76	00 75
ESC	1B	1B	9B	9B	1B (ESC)	1B (ESC)	9B	9B
LeftArrow	00 4B	ESC [ D	D4	D8	86	00 73	94	98
RightArrow	00 4D	ESC [ C	D5	D9	87	00 74	95	99
Spacebar	20 (SP)	20 (SP)	20 (SP)	20 (SP)	00 03(NUL)	00 03	00 03	00 03
TAB	09	00 0F	89	8B	09	89	89	8B
UpArrow	00 48	ESC [ A	00 49	00 47	85	8F	00 84	00 77