

# GRID

SYSTEM CARD © 1983

## GENERAL COMMANDS

CODE-? Display commands  
CODE-A Access  
CODE-B Begin selection  
CODE-C Column selection  
CODE-D Duplicate files, cells or text  
CODE-E Erase files, cells or text  
CODE-ESC Quit without saving  
CODE-I Insert cells  
CODE-M Move files, cells or text  
CODE-O Options  
CODE-P Properties  
CODE-Q Quit and save  
CODE-R Row selection  
CODE-T Transfer (Print, Save, Write)  
CODE-U Display system usage

CODE-W Wildcard  
CODE-BACKSPACE Erase previous word  
CODE-RETURN Confirm  
SHIFT-ESC Shift lock

## GRIDFILE COMMANDS

CODE-? Compress  
CODE-F Find (query database)  
CODE-= Points to column  
CODE-? Report (sort specification)  
CODE-S Substitute  
CODE-W Wildcard (Find command)

## GRIDPLAN COMMANDS

CODE-= Define cells  
CODE-H Headings

CODE-J Jump to cell  
CODE-V View portions of worksheet  
Press CTRL- Arrow keys to move  
between views  
CODE-RETURN Calculate values

## GRIDPLOT COMMANDS

CODE-G Graph  
CODE-H Headings  
CODE-? Set axes

## GRIDWRITE COMMANDS

CODE-F Find  
CODE-J Jump to paragraph  
CODE-S Substitute

## MOVEMENT WITHIN APPLICATIONS

TO MOVE CURSOR

PRESS

One line or cell



One character



One word



To top or bottom of screen or text



To next or preceding screen



TO MOVE CURSOR

PRESS


One cell left or right



One cell right



To top or bottom of table or file

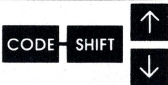

To left or right edge of table or file



To left edge of next line or row




## MOVEMENT WITHIN FORMS OR MENUS

TO MOVE

PRESS

Highlighted strip to choice

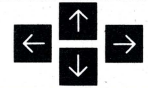

Outline to next item



Outline to previous item



To confirm selection



To start over



1-250 **Window width**

Margins:	Document width	<input type="text" value="Window width"/>
	Automatic indent	Yes
Display:	Ruler	No
	Format characters	No
Tab Stops:	Spacing	Manual
	First	Automatic
Cursor:	Movement by	Word
	Cursor wrap	Yes
Tab for cell-based files		No
Current typeface		System-wide

Options: Fill in form and confirm