

# GRID

## GRIDVT100

© 1983

### GRIDVT100 STATUS DISPLAY AREA

**ON LINE** or **LOCAL**

Terminal communicating with host

Terminal

not communicating with host

**LOCKED**

Keyboard is locked

**L1, L2**

Indicators turned on/off by host

or **INSERT**

In Insert mode

**L3, L4**

Indicators turned on/off by host

or **SENDING**

Sending file

**KPAM**

In KeyPad application mode

**Xs**

XOFF character sent to host

**Xr**

XOFF character received from host



Connected to host

or 

Not connected to host

### VT100 KEYPAD

PF1	PF2	PF3	PF4
7	8	9	-
4	5	6	,
1	2	3	ENTER
0	.		

GRIDVT100 KEYPAD & FUNCTION KEYS. Press **CODE** **SHIFT** for top row. Press **CODE** for second row.

1	2	3	4	5	6	7	8	9	0
PF1	PF2	PF3	PF4	.	,	-	ENTER	NO SCROLL	DELETE

# GRID

## GRIDVT100


© 1983

Press **CTRL** **K** for

- Local
- Clear All Tabs
- Set Default Tabs
- Send Answer Back Message
- Send Long Break
- Reset Terminal
- Unlock Keyboard
- CODE-9 No Scroll
- CODE-0 Delete

**CTRL** **ESC** = Short Break

Press **CTRL** **DESIRED KEY** to generate an ASCII control character. Use Keyboard diagram below or table at right for reference.

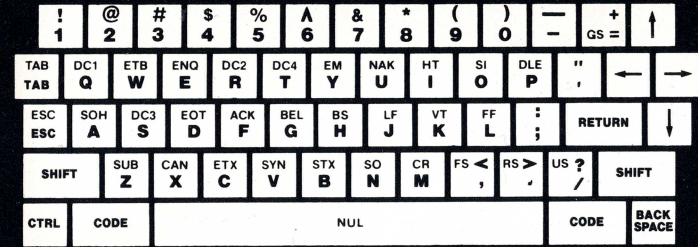

ASCII Control Char.	Char. Key	ASCII Control Char.	Char. Key	ASCII Control Char.	Char. Key
ACK	F	ENQ	E	NUL	Spacebar
BEL	G	EOT	D	RS	.
BS	H	ESC	ESC	SI	O
CAN	X	ETB	W	SO	N
CR	M	ETX	C	SOH	A
DC1	Q	FF	L	STX	B
DC2	R	FS	,	SUB	Z
DC3	S	GS	=	SYN	V
DC4	T	HT	I	TAB	TAB
DLE	P	LF	J	US	/
EM	Y	NAK	U	VT	K